



UNIVERSITY OF CAMBRIDGE INTERNATIONAL EXAMINATIONS
General Certificate of Education
Advanced Subsidiary Level and Advanced Level

CANDIDATE
NAME

CENTRE
NUMBER

--	--	--	--	--

CANDIDATE
NUMBER

--	--	--	--

CHEMISTRY

9701/33

Paper 31 Advanced Practical Skills

May/June 2010

2 hours

Candidates answer on the Question Paper.

Additional Materials: As listed in the Instructions to Supervisors

READ THESE INSTRUCTIONS FIRST

Write your Centre number, candidate number and name on all the work you hand in.
Give details of the practical session and laboratory where appropriate, in the boxes provided.
Write in dark blue or black pen.
You may use a soft pencil for any diagrams, graphs or rough working.
Do not use staples, paper clips, highlighters, glue or correction fluid.
DO **NOT** WRITE IN ANY BARCODES.

Answer **all** questions.

You may lose marks if you do not show your working or if you do not use appropriate units.

Use of a Data Booklet is unnecessary.

Qualitative Analysis Notes are printed on pages 15 and 16.

At the end of the examination, fasten all your work securely together.
The number of marks is given in brackets [] at the end of each question or part question.

Session	
Laboratory	

For Examiner's Use	
1	
2	
Total	

This document consists of **14** printed pages and **2** blank pages.



BLANK PAGE

- 1 You are required to determine the molar enthalpy change of solution for ammonium chloride, **FA 1**.

For
Examiner's
Use

When an exothermic reaction takes place in a container such as a beaker, some of the evolved heat energy is absorbed by the beaker.

When an endothermic reaction takes place some of the required heat energy is supplied by the beaker.

The amount of heat energy evolved or supplied for a 1 °C change in temperature is known as the heat capacity of the beaker.

In preparation for your experiment to determine the molar enthalpy change of solution for **FA 1** you will first need to determine the approximate heat capacity of a 250 cm³ beaker.

Before starting any practical work read through the instructions in (a) and draw up a table to record your results.

(a) Determining the approximate heat capacity of the 250 cm³ beaker

When samples of hot and cold water are mixed in the 250 cm³ beaker, some heat is lost to the beaker in raising its temperature. To determine the approximate heat capacity of your 250 cm³ beaker, you will determine the maximum temperature rise when a sample of hot water is added to cold water in the beaker.

- Use a 50 cm³ measuring cylinder to transfer 50 cm³ of cold water into the 250 cm³ beaker.
- Use the 50 cm³ measuring cylinder to transfer 50 cm³ of cold water into a 100 cm³ beaker. Note the temperature of the water in this 100 cm³ beaker and heat it **carefully and gently** until the temperature of the water in it has increased by 45–50 °C then stop heating, *e.g. if the water is at 20.0 °C you should warm it to 65–70 °C*.
- Stir the cold water in the 250 cm³ beaker with the thermometer.
- Record the temperature of the cold water (this is the temperature at $t = 0$ min).
- Record the temperature each minute for 3 minutes.
- After you have taken the reading at $t = 3$ min, use the thermometer to stir the hot water in the 100 cm³ beaker.
- At $t = 4$ min, measure the temperature of the hot water and record this value in the box below.
- **Immediately** add the hot water from the 100 cm³ beaker to the cold water in the 250 cm³ beaker. Stir with the thermometer but do **not** record the temperature.
- Continue to stir the water throughout the experiment.
- Record the temperature at $t = 5$ min, and then every $\frac{1}{2}$ **minute** until $t = 8$ min.
- Empty and rinse the 250 cm³ beaker. Dry it using a paper towel.
- Record all measurements of time and temperature obtained.


The temperature, T_1 , of the hot water at $t = 4$ min is °C.

Table of results

[3]

(b) Graph plotting

1. Plot a graph of the temperature of the water in the 250 cm³ beaker (y-axis) against time (x-axis) on the grid below.
Do **not** plot the temperature, T_1 , of the hot water at $t = 4$ min.
2. Draw two straight lines of best fit; one through the points up to $t = 3$ min; the second through the points from $t = 5$ min to $t = 8$ min. Extrapolate both lines to $t = 4$ min.
3. From the extrapolated lines read the minimum and the maximum temperatures at $t = 4$ min. Record these values in the spaces provided below.
4. Determine the values for the two temperature changes at $t = 4$ min.

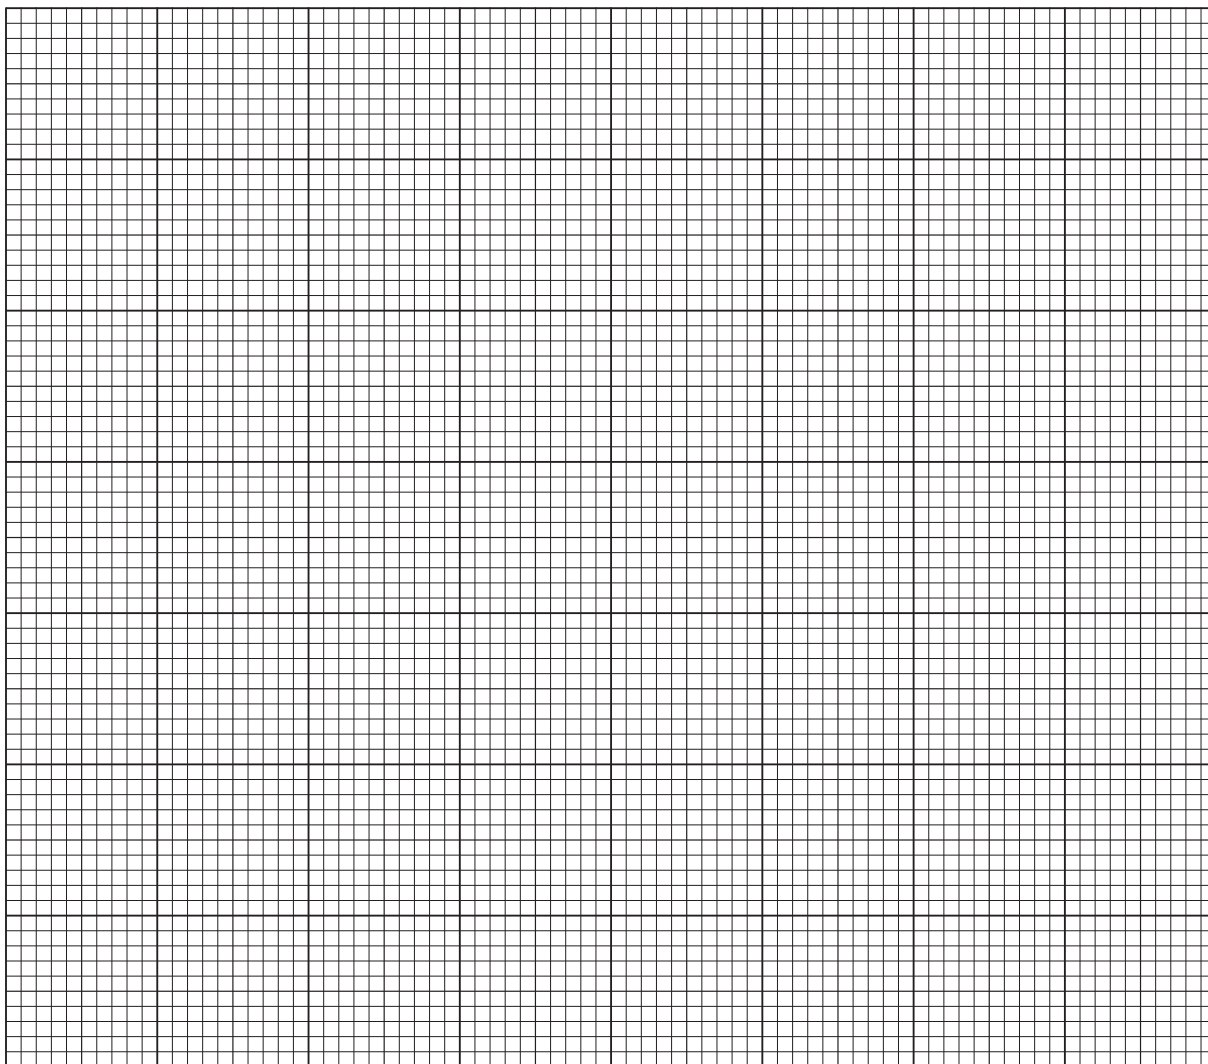

Minimum temperature, T_2 , at $t = 4$ min is °C.

Maximum temperature, T_3 , at $t = 4$ min is °C.

Temperature rise for 50 cm³ of cold water in the 250 cm³ beaker, $(T_3 - T_2)$ is °C.

Temperature fall for 50 cm³ of hot water from the 100 cm³ beaker, $(T_1 - T_3)$ is °C.
[4]

(c) CalculationsFor
Examiner's
Use

Working should be shown in all calculations.

[4.2 J are absorbed or released when the temperature of 1.0 cm³ of **water** changes by 1.0 °C.]

- (i) Calculate the heat energy gained by the 50 cm³ of cold water in the 250 cm³ beaker.

The heat energy gained by the cold water = J.

- (ii) Calculate the heat energy lost by the 50 cm³ of hot water from the 100 cm³ beaker.

The heat energy lost by the hot water = J.

- (iii) The difference between the values calculated in (i) and (ii) is an approximate value for the total heat energy absorbed by the 250 cm³ beaker during the experiment. The heat capacity of the beaker is the amount of heat energy absorbed for a 1 °C change in temperature.

$$\text{approximate heat capacity of the 250 cm}^3 \text{ beaker} = \frac{(\text{heat energy lost}) - (\text{heat energy gained})}{(T_3 - T_2)} \text{ J}^\circ\text{C}^{-1}$$

Use your answers to (i) and (ii) and the temperature rise from (b) to calculate the approximate heat capacity of the 250 cm³ beaker.

The approximate heat capacity of the 250 cm³ beaker = J °C⁻¹.

[1]

BLANK PAGE

(d) Determining the enthalpy change of solution for ammonium chlorideFor
Examiner's
Use

Follow the instructions below to find the temperature change when a known mass of solid ammonium chloride dissolves in water.

You are provided with two samples of ammonium chloride. You should use the sample labelled **NH₄Cl** in **experiment 1** and the sample labelled **FA 1** in **experiment 2**.

Experiment 1

- Enter all results in the table below.
- Weigh the stoppered tube containing ammonium chloride, which is labelled **NH₄Cl**.
- Use the 50 cm³ measuring cylinder to transfer 100 cm³ of cold water into the rinsed and dried 250 cm³ beaker used in **(a)**.
- Stir the water in the beaker with the thermometer and record the temperature.
- Add the solid from the weighed tube to the water.
- Stir the mixture constantly with the thermometer.
- Record the minimum temperature obtained in the solution.
- Reweigh the tube labelled **NH₄Cl**, its stopper and any residual ammonium chloride.
- Empty and rinse the beaker and dry it using a paper towel.

Experiment 2

- Enter all results in the table below.
- Weigh a clean, dry, boiling-tube.
- Weigh between 9.8 g and 10.2 g of **FA 1**, ammonium chloride, into the boiling-tube.
- Repeat the procedure in **experiment 1** and record the minimum temperature obtained when this mass of **FA 1** dissolves in 100 cm³ of water.
- Reweigh the boiling-tube and any residual ammonium chloride.

Results

	experiment 1	experiment 2
mass of tube + ammonium chloride / g		
mass of empty tube / g		
mass of tube + residual ammonium chloride / g		
mass of ammonium chloride / g		
initial temperature of water / °C		
minimum temperature obtained / °C		
temperature fall, ΔT / °C		

[6]

(e) CalculationsFor
Examiner's
Use

Working should be shown in all calculations.

- (i) Use the temperature fall from **(d)**, **experiment 1**, to calculate the change in heat energy of the solution.
[**4.3 J** are absorbed or released when the temperature of 1.0 cm^3 of **solution** changes by 1.0°C .]

The change in heat energy of the solution = J.

- (ii) To calculate the total change in heat energy as ammonium chloride dissolves in water, the change in heat energy of the 250 cm^3 beaker has to be added to the change in heat energy of the solution.
Explain why these two changes in heat energy have to be added together.

.....

- (iii) Use your answer in **(i)** above and the approximate heat capacity of the 250 cm^3 beaker calculated in **(c)(iii)** to calculate the combined change in heat energy of the beaker and solution.

The combined change in heat energy of the beaker and solution = J.

- (iv) Calculate how many moles of **FA 1**, NH_4Cl , were used in **(d)**, **experiment 1**.
[A_r : Cl, 35.5; H, 1.0; N, 14.0]

i	
ii	
iii	
iv	

..... mol of **FA 1** were used in **experiment 1**.

- $$\Delta H_{\text{solution}}(\text{NH}_4\text{Cl}) = \text{.....} \text{ kJ mol}^{-1}.$$
- sign calculated value*

-
-
-

v	
vi	
vii	
viii	

(f) Evaluation

A data book value for the molar enthalpy change of solution, $\Delta H_{\text{solution}}(\text{NH}_4\text{Cl})$, is $+15.2 \text{ kJ mol}^{-1}$.

The value you have obtained may be significantly different from this value.

Calculate the difference between your value of $\Delta H_{\text{solution}}(\text{NH}_4\text{Cl})$ and the data book value. Record this difference below. Express this difference as a percentage of the data book value.

difference = kJ mol^{-1}

percentage difference = %
[1]

(g) Sources of error

Describe **one** major source of error in this experiment. Suggest an improvement which would significantly increase the accuracy of the experiment. Explain why your suggestion would produce a more accurate value.

description of major source of error

.....
.....

suggested improvement

.....
.....

explanation of why suggestion would increase experimental accuracy

.....
.....

[2]

[Total: 25]

- 2 (a) You are provided with three solutions, **FA 2**, **FA 3** and **FA 4**. The only anions that may be present in these solutions are sulfate and carbonate. One or more of the solutions may contain both anions.

For
Examiner's
Use

Identification of the anions in FA 2, FA 3 and FA 4.

Most metal carbonates are insoluble, most metal sulfates are soluble and all metal nitrates are soluble in water.

- (i) Use this information and the Qualitative Analysis Notes on page 16 to select
- **reagent 1**, to identify any carbonate ion present,
 - **reagent 2**, to identify any sulfate ion present.

reagent 1 **reagent 2** [1]

- (ii) Explain the order in which you will add your chosen reagents to determine the anion or anions present in each of **FA 2**, **FA 3** and **FA 4**.

.....

[1]

- (iii) Use the reagents selected in (a)(i) to test each of the solutions **FA 2**, **FA 3** and **FA 4**. Record your observations in the table below.

reagent	observations		
	FA 2	FA 3	FA 4

[2]

- (iv) From your observations, identify the anion or anions present in each of the solutions.

solution	carbonate	sulfate	evidence
FA 2			
FA 3			
FA 4			

[2]

(b) You are provided with four solutions, **FA 5**, **FA 6**, **FA 7** and **FA 8**. Perform the test-tube experiments described below and record your observations in the table. Where gases are released they should be identified by a test, **described in the appropriate place in your observations**.

	tests	observations			
		FA 5	FA 6	FA 7	FA 8
(i)	To about 1 cm depth of solution in a test-tube, add 10 drops of aqueous sodium hydroxide. Shake the mixture,				
	then add a further 2 cm depth of aqueous sodium hydroxide. Shake the mixture again,				
	then leave the tube to stand for 2–3 minutes.				
(ii)	If no precipitate has formed in test (i) above; transfer the solution to a boiling-tube and warm gently with a Bunsen burner. Care: heating aqueous sodium hydroxide in a tube may cause the solution to be ejected from the tube.				
(iii)	To about 1 cm depth of solution in a test-tube, add 10 drops of aqueous ammonia. Shake the mixture,				
	then add a further 2 cm depth of aqueous ammonia. Shake the mixture again,				
	then leave the tube to stand for 2–3 minutes.				

[7]

For Examiner's Use						
i	ii	iii	iv	v	vi	vii

(c) From your observations in (b), identify the cation present in each of the following solutions.

For
Examiner's
Use

solution	cation	evidence
FA 5		
FA 6		
FA 8		

[2]

[Total: 15]

Qualitative Analysis Notes

Key: [ppt. = precipitate.]

1 Reactions of aqueous cations

ion	reaction with	
	NaOH(aq)	NH ₃ (aq)
aluminium, Al ³⁺ (aq)	white ppt. soluble in excess	white ppt. insoluble in excess
ammonium, NH ₄ ⁺ (aq)	no ppt. ammonia produced on heating	—
barium, Ba ²⁺ (aq)	no ppt. (if reagents are pure)	no ppt.
calcium, Ca ²⁺ (aq)	white ppt. with high [Ca ²⁺ (aq)]	no ppt.
chromium(III), Cr ³⁺ (aq)	grey-green ppt. soluble in excess giving dark green solution	grey-green ppt. insoluble in excess
copper(II), Cu ²⁺ (aq)	pale blue ppt. insoluble in excess	blue ppt. soluble in excess giving dark blue solution
iron(II), Fe ²⁺ (aq)	green ppt. turning brown on contact with air insoluble in excess	green ppt. turning brown on contact with air insoluble in excess
iron(III), Fe ³⁺ (aq)	red-brown ppt. insoluble in excess	red-brown ppt. insoluble in excess
lead(II), Pb ²⁺ (aq)	white ppt. soluble in excess	white ppt. insoluble in excess
magnesium, Mg ²⁺ (aq)	white ppt. insoluble in excess	white ppt. insoluble in excess
manganese(II), Mn ²⁺ (aq)	off-white ppt. rapidly turning brown on contact with air insoluble in excess	off-white ppt. rapidly turning brown on contact with air insoluble in excess
zinc, Zn ²⁺ (aq)	white ppt. soluble in excess	white ppt. soluble in excess

[Lead(II) ions can be distinguished from aluminium ions by the insolubility of lead(II) chloride.]

2 Reactions of anions

<i>ion</i>	<i>reaction</i>
carbonate, CO_3^{2-}	CO_2 liberated by dilute acids
chromate(VI), $\text{CrO}_4^{2-}(\text{aq})$	yellow solution turns orange with $\text{H}^+(\text{aq})$; gives yellow ppt. with $\text{Ba}^{2+}(\text{aq})$; gives bright yellow ppt. with $\text{Pb}^{2+}(\text{aq})$
chloride, $\text{Cl}^-(\text{aq})$	gives white ppt. with $\text{Ag}^+(\text{aq})$ (soluble in $\text{NH}_3(\text{aq})$); gives white ppt. with $\text{Pb}^{2+}(\text{aq})$
bromide, $\text{Br}^-(\text{aq})$	gives cream ppt. with $\text{Ag}^+(\text{aq})$ (partially soluble in $\text{NH}_3(\text{aq})$); gives white ppt. with $\text{Pb}^{2+}(\text{aq})$
iodide, $\text{I}^-(\text{aq})$	gives yellow ppt. with $\text{Ag}^+(\text{aq})$ (insoluble in $\text{NH}_3(\text{aq})$); gives yellow ppt. with $\text{Pb}^{2+}(\text{aq})$
nitrate, $\text{NO}_3^-(\text{aq})$	NH_3 liberated on heating with $\text{OH}^-(\text{aq})$ and Al foil
nitrite, $\text{NO}_2^-(\text{aq})$	NH_3 liberated on heating with $\text{OH}^-(\text{aq})$ and Al foil; NO liberated by dilute acids (colourless $\text{NO} \rightarrow$ (pale) brown NO_2 in air)
sulfate, $\text{SO}_4^{2-}(\text{aq})$	gives white ppt. with $\text{Ba}^{2+}(\text{aq})$ (insoluble in excess dilute strong acid) or gives white ppt. with $\text{Pb}^{2+}(\text{aq})$
sulfite, $\text{SO}_3^{2-}(\text{aq})$	SO_2 liberated with dilute acids; gives white ppt. with $\text{Ba}^{2+}(\text{aq})$ (soluble in excess dilute strong acid)

3 Tests for gases

<i>gas</i>	<i>test and test result</i>
ammonia, NH_3	turns damp red litmus paper blue
carbon dioxide, CO_2	gives a white ppt. with limewater (ppt. dissolves with excess CO_2)
chlorine, Cl_2	bleaches damp litmus paper
hydrogen, H_2	"pops" with a lighted splint
oxygen, O_2	relights a glowing splint
sulfur dioxide, SO_2	turns acidified aqueous potassium dichromate(VI) (aq) from orange to green

Permission to reproduce items where third-party owned material protected by copyright is included has been sought and cleared where possible. Every reasonable effort has been made by the publisher (UCLES) to trace copyright holders, but if any items requiring clearance have unwittingly been included, the publisher will be pleased to make amends at the earliest possible opportunity.

University of Cambridge International Examinations is part of the Cambridge Assessment Group. Cambridge Assessment is the brand name of University of Cambridge Local Examinations Syndicate (UCLES), which is itself a department of the University of Cambridge.